 


4 PROFILE FEATURES

 
CHECK PROFILE

Check current profile number. LED will blink # to indicate profile.



TOGGLE PROFILES ON/OFF

Quickly return controller to stock functionality.



LOCK MODS

Prevent mods from being turned on/off during gameplay.

Hold for 3 seconds. When light bar flashes, release.



CLEAR ALL

Clear all functions in current profile.

 


MASTER RESET

Revert the controller's firmware to factory settings. Do not perform this operation unless you want to overwrite all of your customized profiles. **This action cannot be undone.**

Note: Mods must be toggled off in order to perform Master Reset.

Hold for 10 seconds.

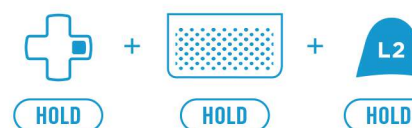

HOW-TO VIDEOS ON TINYURL.COM/EVIL-PLAYLIST



INSTRUCTION MANUAL



HOW-TO VIDEOS ON TINYURL.COM/EVIL-PLAYLIST

1 CHOOSING A PROFILE

Your Evil Controller comes with 20 customizable profiles. They operate just like classes in Call of Duty®. Simply select the profile (class) and assign mods (perks).

By default, the first 10 profiles have a fire rate equal to that of their profile number. For example, profile 5 = 5 shots per second. Try them out and see how you like them. See **SECTION 3: ADVANCED MODS** to learn how to tweak these defaults.

UPON PROFILE ACTIVATION, PROFILE 1 WILL AUTOMATICALLY BE SELECTED.

SELECT A PROFILE

Tap (profile #) of times to choose a desired profile.



20 CUSTOMIZABLE PROFILES



DEFAULT FIRE RATES

2 ADDING MODS

Select a profile and enter the following button combos to activate the mods of your choice. Test in a private match.

Note: If using **TRIGGER SWITCH**, the following combos that reference **L2/R2** will be activated by **L1/R1**.

RAPID FIRE
Increase the rate of fire of semi-automatics weapons.



To optimize the rate of fire in your game take a look at Advanced Mods to adjust your rate of fire.

LEFT TRIGGER RAPID FIRE

Increase the rate of fire of semi-automatics weapons equipped on your left trigger.



AKIMBO RAPID FIRE

Increase the rate of fire on both triggers while dual wielding.



AUTO SCOPE / AUTO RUN

 


To enable Auto Run, tap L2 while moving.

DROP SHOT

Default Button Layout: Press **X** to stand up and keep Drop Shot active. Press **O** to stand up and deactivate Drop Shot.

Tactical Button Layout: Press **X** to stand up and keep Drop Shot active. Press **RS** to stand up and deactivate Drop Shot.

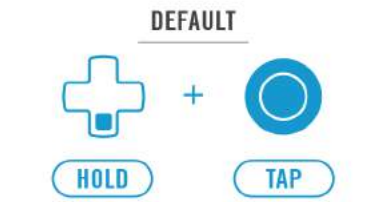

TACTICAL RAPID FIRE

Toggle Rapid Fire on/off. Useful when primary and secondary weapons have different fire rates.

1 Activate mod. Pressing **▲** to swap weapons will also toggle Rapid Fire on/off.



2 Toggle Rapid Fire on/off without switching weapons.



3 Return to standard Rapid Fire.



 
AUTO SPOT *Battlefield 4® Only*



Automatically spot an enemy if they appear on screen.

3 ADVANCED MODS

ADJUSTING RATE OF FIRE

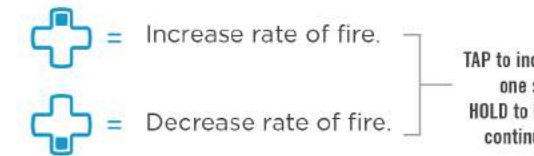

TAP to increase by one step. HOLD to increase continuously.



It's possible for the rate of fire to be so fast that it doesn't register in-game. Slowing automatic weapons down to reduce recoil and increase accuracy can be effective. Features 15,000 speed increments.



FAST RELOAD *Call of Duty: Ghosts* *Call of Duty: Modern Warfare*

Reload weapons very quickly. It functions like the Sleight of Hand perk, but does not animate in a similar manner. Because weapons reload at different rates, Fast Reload must be programmed and adjusted accordingly.



- 1 Equip your gun of choice.
- 2 Fire off a few rounds.
- 3 Press and hold **d-pad down** and **□** to reload.
- 4 Release **d-pad down** and **□** when the bullet counter shows a full magazine.
- 5 Fire off a few more rounds.
- 6 Test the reload by tapping **□**.
- 7 Hold **R2** after tapping **□** and your gun will immediately fire once the Fast Reload is complete. The animation may appear "glitchy", but that's just the mod cutting away the unnecessary animation.

Note: Holding **d-pad down** and **□** will restart the programming process.

JITTERMOD (AUTO BURST) *Call of Duty: MWR Only (M16A4)*

Enter a profile then,



Activating jitter will disable Rapid fire. Repeat function to disable jitter and reactivate Rapid Fire.



HOW-TO VIDEOS ON
[TINYURL.COM/EVIL-PLAYLIST](https://www.tinyurl.com/evil-playlist)